

Overview

In Pason’s newest PVT, we’ve added the ability to “snooze” (temporarily mute) alarms. You can now:

- Momentarily snooze the Flow gain/loss alarm
- Momentarily snooze the Volume gain/loss alarm
- Adjust the snooze and mute time from 1 to 10 minutes, in increments of 1 minute (ask your field technician how to do this)

We’ve made other changes as well:

- When an alarm occurs and the PVT is muted or snoozed, the state (“HI ” or “LD”) is displayed
- The word “SLEEP” is displayed in the LCD screen when an alarm is snoozed
- Memos are generated on the EDR when any mute or snooze state changes

Note:

As with existing PVT mute functionality, the snooze feature **does not** apply to EDR alarms sounding the PVT horn.

Setup

To enable and set up this feature in your PVT, call your Pason Field Technician or Technical Support at 1-877-255-3158.

Using the Horn Snooze Feature

During the normal operation of the PVT, use the Flow Alarm and Volume Alarm switches as follows to control the mute feature:

- To snooze an alarm, flip from the On position (up), down and back up again quickly.
- Flip the switch in any way to cancel a snooze. Once the snooze is cancelled, the state of that alarm will be whatever position the switch is left in.
- If the time delay has elapsed, the snooze will automatically cancel and the alarm will be back in the On state.
- The LED light will blink when either alarm has been muted (alarm switch flipped down) and snoozed.

See the following images for examples of the various states.

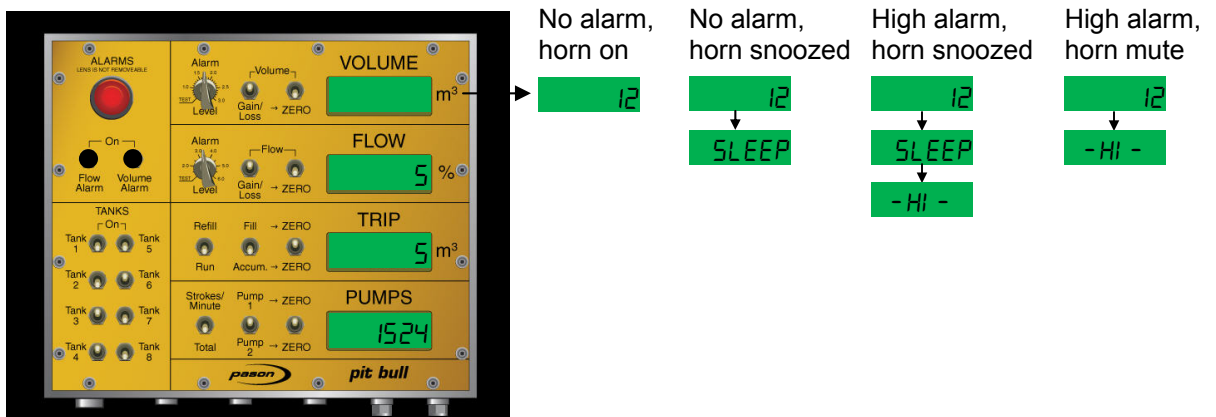


Figure 1: PVT with Volume display illustration under various states

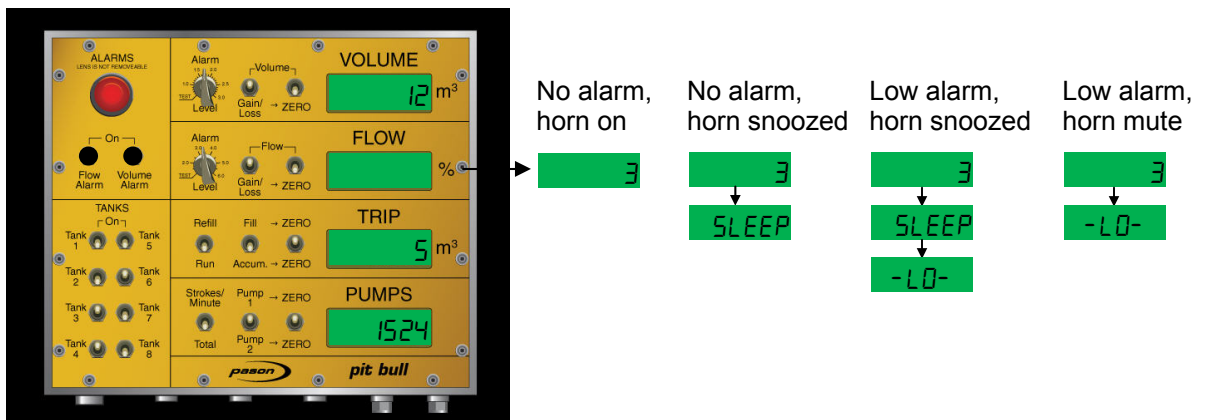


Figure 2: PVT with Flow display illustration under various states



Figure 3: Samples of memos sent to the EDR